

Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Казахстан (7273)495-231

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: hmh@nt-rt.ru || <https://hamiltonbeach.nt-rt.ru/>

Модель 25511. Устройство для приготовления яичных кусковых закусок из сваренных вкрутую яиц (бирюзовая).

FEATURES



- Make eggs 3 ways
 - Create flavorful egg bites with your own fresh ingredients
 - Make up to 6 perfect hard-boiled eggs
 - Make healthy egg bites or poached eggs in under 10 minutes
 - Easy to clean
 - Water measuring cup included
- Power and cooking lights

Dimensions (inches): 6.1 H x 8 W x 5.7 D

DETAILS

With the Hamilton Beach® Egg Bites Maker with Hard-Boiled Eggs Insert, you can quickly and easily make egg bites, poached eggs and hard-boiled eggs. You'll enjoy creating a wide variety of egg bite flavors and combinations, and egg bite recipes are included to get you started. In addition to egg bites and poached eggs, the Hamilton Beach Egg Bites Maker with Hard-Boiled Eggs Insert also makes up to 6 soft, medium or hard-boiled eggs. Using the Hamilton Beach Egg Bites Maker with Hard-Boiled Eggs Insert is easy. To make egg bites or poached eggs, fill the base with water, add your eggs or egg mixture to the nonstick tray, top with the lid, and under 10 minutes, your eggs are ready. To make hard-boiled eggs, simply fill the base with water, place up to 6 eggs on the insert and top with the lid. Your eggs will be ready in minutes and it's much faster and easier than boiling water on the stovetop. Includes convenient water measuring cup. For easy cleanup, the nonstick egg bite/poaching tray, 6-egg insert, lid and water measuring cup all go in the dishwasher.

Make eggs 3 ways

Make 2 egg bites, 2 poached eggs or 6 hard-boiled eggs. To cook eggs, simply pour water into the base and place either the nonstick egg bite/poaching tray or 6-egg insert filled with eggs onto the base.

Create flavorful egg bites with your own fresh ingredients

Why rely on the coffee shop or freezer section for egg bites? Instead, make your own egg bites in under 10 minutes. Delicious recipes are included with this egg bite maker.

Make up to 6 perfect hard-boiled eggs

Prepare soft, medium, or hard-boiled eggs just the way you like them. Not only will eggs come out perfectly, this egg cooker saves you time because it's faster than boiling eggs on the stovetop.

Make healthy egg bites or poached eggs in under 10 minutes

Create low-calorie egg bites or poached eggs using fluffy egg whites. Add your favorite fresh vegetables and herbs for a deliciously light, vitamin-packed meal with this egg poacher.

Easy to clean

The nonstick egg bite/poaching tray, 6-egg insert, lid and water measuring cup are dishwasher safe for effortless cleanup.

Модель 25500. Яйцеварка вместимостью 7 яиц (черная).



FEATURES

- Make 7 hard, medium, and soft-boiled eggs
- Includes 3-egg nonstick poaching tray, water measuring cup with egg-piercing tool, and 7 egg holding tray
- Built-in timer with sound when cooked

Dimensions (inches): 4.53 H x 12.64 W x 11.61 D

DETAILS

Take the guesswork out of making hard, medium, and soft-boiled eggs and cook perfect poached eggs every time with the Hamilton Beach Egg Cooker (25500). The included water measuring cup with easy-to-read markings makes it simple to cook eggs to your desired hardness every time. The removable egg tray cooks up to 7 eggs, while the egg poaching tray lets you poach up to three eggs at a time, all with the touch of a button.

PERFECT EGGS IN 3 EASY STEPS:

1. **Add Water.** Fill the water reservoir with water using the included water measuring cup. The water measuring cup includes guides on the sides of the cup to indicate how much water is needed for your combination of desired doneness and number of eggs.
2. **Add Eggs.** Place the eggs in the egg tray or poaching tray. You can cook up to 7 eggs in the egg tray and up to 3 eggs in the poaching tray at one time.
3. **One-touch cooking.** Press the ON (I) switch and start cooking. Look for the red light to indicate the egg cooker is cooking, and the cooker will sound when the eggs are done.

SIMPLIFY CLASSIC EGG DISHES

Classic egg dishes are easy to make when you use the Egg Cooker to cook hard-boiled eggs for classic deviled eggs, egg salad, and potato salad, prepare perfectly poach eggs for eggs Benedict with asparagus or to top a tater tot waffle, and swiftly soft-boil eggs to add to ramen soup.

WHAT'S IN THE BOX:

- **Egg Cooker Base** - water reservoir and cord wrap for easy storage
- **Egg Holder** - holds up to 7 eggs
- **Poaching Tray** - poach up to 3 eggs at a time
- **Water Measuring Cup** - includes egg piercer at bottom of cup
- **Lid**

TEST KITCHEN TIPS:

- **How to check for fresh eggs:** Place the egg in a bowl of water. If it rises, they are not fresh, and if it sinks, it is fresh. Fresh eggs can be very hard to peel, so for best results, use eggs that have been refrigerated for 7 to 10 days before cooking.
- **How to peel hard-cooked or hard-boiled eggs:** To peel an egg, start with a cooled egg and crackle the shell all over by gently tapping the egg on a table or countertop. Roll the egg between your hands to loosen the shell, then peel off the shell, starting at the largest end. Hold the egg under running water or dip it in a bowl of water to make peeling easier.
- **How to pierce an egg before cooking or boiling:** If you'd like to pierce your eggs before cooking, the water measuring cup that comes with your egg cooker is equipped with an egg-piercing tool at the bottom of the cup. Some people pierce eggs before cooking because they believe it can make them easier to peel.
- **Use only cold eggs.** Your eggs may be overcooked if they aren't cold from the refrigerator
- **Rinse hard, medium, or soft-cooked eggs after cooking.** Stop the cooking process by rinsing eggs with cold water or place in a bowl of cold water.
- **Use large eggs.** If you are using anything smaller than a large egg, fill the water reservoir with enough water for one less egg than what you are actually cooking so your smaller eggs don't overcook. Using extra large or jumbo eggs will result in undercooked eggs.
- **Prevent the green ring around the yolk.** If your hard-boiled eggs get a green ring around the egg yolk, it's overcooked. Try reducing the amount of water being used in the water reservoir of the egg cooker by one egg.
- Consuming raw or undercooked eggs may increase your risk of foodborne illness. For more information, refer to the U.S. FDA's Food Facts.

Модель 25503. Комбинированная яйцеварка со встроенным таймером, лотком для жарки, крышкой из нержавеющей стали.

FEATURES



- 7 egg capacity
- Perfect eggs every time
- Prepares soft, medium, or hard-boiled eggs — even poaches
- 3-egg nonstick poaching tray
- Ready timer with tone
- Stainless steel lid
- Water measuring cup with egg piercing tool

Dimensions (inches): 8.19 H x 7.68 W x 6.3 D

DETAILS

Easy, effortless eggs for every meal of the day.

The Hamilton Beach® Egg Cooker helps you make eggs in a matter of minutes, for quick and easy breakfasts, snacks, side dishes and more. The removable egg tray cooks up to 7 hard, medium or soft-boiled eggs, while the egg poaching tray lets you poach up to 3 eggs at once.

Ideal for Every Meal

Eggs can be enjoyed for breakfast, lunch, dinner and everything in between. Easily poach eggs to pair with a piece of avocado toast, whip up a platter of deviled eggs, use them as

salad toppers, pack them for a quick protein-packed snack or top off a bowl of ramen – the options are endless.

Easy Soft, Medium or Hard-Boiled Eggs

Make up to 7 soft, medium or hard-boiled eggs at a time. Just place the eggs into the tray, add water, push start and the timer will alert you when they're ready.

Poached Eggs in Minutes

Make easy, effortless poached eggs in the included three-egg poaching tray. Once you hit start, they cook in less than ten minutes.

Water Measuring Cup Included

The included water measuring cup lets you know exactly how much water to add depending on how you like your eggs – poached or soft, medium or hard-boiled. The bottom of the cup even has a convenient built-in egg-piercing tool.

PERFECT EGGS IN 3 EASY STEPS:

1. **Add Water.** Fill the water reservoir with water using the included water measuring cup. The water measuring cup includes guides on the sides of the cup to indicate how much water is needed for your combination of desired doneness and number of eggs.
2. **Add Eggs.** Place the eggs in the egg tray or poaching tray. You can cook up to 7 eggs in the egg tray and up to 3 eggs in the poaching tray at one time.
3. **One-touch cooking.** Press the ON (I) switch and start cooking. Look for the red light to indicate the egg cooker is cooking, and the cooker will sound when the eggs are done.

WHAT'S IN THE BOX:

- **Egg Cooker Base** - water reservoir and cord wrap for easy storage
- **Egg Holder** - holds up to 7 eggs
- **Poaching Tray** - poach up to 3 eggs at a time
- **Water Measuring Cup** - includes egg piercer at bottom of cup
- **Lid**

TEST KITCHEN TIPS:

- **How to check for fresh eggs:** Place the egg in a bowl of water. If it rises, they are not fresh, and if it sinks, it is fresh. Fresh eggs can be very hard to peel, so for best results, use eggs that have been refrigerated for 7 to 10 days before cooking.
- **How to peel hard-cooked or hard-boiled eggs:** To peel an egg, start with a cooled egg and crackle the shell all over by gently tapping the egg on a table or countertop. Roll the egg between your hands to loosen the shell, then peel off the shell, starting at the largest end. Hold the egg under running water or dip it in a bowl of water to make peeling easier.
- **How to pierce an egg before cooking or boiling:** If you'd like to pierce your eggs before cooking, the water measuring cup that comes with your egg cooker is equipped with an egg-piercing tool at the bottom of the cup. Some people pierce eggs before cooking because they believe it can make them easier to peel.
- **Use only cold eggs.** Your eggs may be overcooked if they aren't cold from the refrigerator
- **Rinse hard, medium, or soft-cooked eggs after cooking.** Stop the cooking process by rinsing eggs with cold water or place in a bowl of cold water.
- **Use large eggs.** If you are using anything smaller than a large egg, fill the water reservoir with enough water for one less egg than what you are actually cooking so your smaller eggs don't overcook. Using extra large or jumbo eggs will result in under-cooked eggs.

- **Prevent the green ring around the yolk.** If your hard-boiled eggs get a green ring around the egg yolk, it's overcooked. Try reducing the amount of water being used in the water reservoir of the egg cooker by one egg.
- Consuming raw or undercooked eggs may increase your risk of foodborne illness. For more information, refer to the U.S. FDA's Food Facts.

Модель 25506. Омлетница вместимостью 2 яйца (бирюзовая).

FEATURES



- Makes perfect egg bites - Compare to Starbucks®* Skip the expense of egg bites from the coffee shop or grocery store and make your own in the comfort of your home. Your family will love the taste and you can use your own fresh ingredients.
- Create endless flavor options and fresh, preservative-free ingredients You can make an unlimited variety of egg bites using your own fresh ingredients and imagination, or start with the included recipes.
- Enjoy consistent results every time Don't bother with the oven or taking the time to sous vide — the Egg Bites Maker is the consistent, guess-free way to cook egg bites and poached eggs perfectly every time in under 10 minutes.
- Nonstick egg bite/poaching tray is dishwasher safe Eggs won't stick and after cooking, the nonstick tray and lid go on the top shelf of the dishwasher for easy cleanup.
- Power and cooking lights Indicate when power is on and eggs are ready. Includes water measuring cup Makes it easy to add the exact amount of water every time.

Dimensions (inches): 4.6 H x 8.0 W x 5.69 D

DETAILS

If you rely on Starbucks®* to satisfy your hunger for egg bites, save money and skip the trip to the coffee shop on your morning commute by making them at home with the Hamilton Beach® Egg Bites Maker. It lets you quickly and easily make your own velvety egg bites with fresh, delicious ingredients. And with the Hamilton Beach Egg Bites Maker, your choices are not limited — you can create an endless variety of egg bite flavors and combinations using your own fresh, preservative-free ingredients. In addition to making 2 egg bites, the Hamilton Beach Egg Bites Maker also expertly poaches 2 eggs. To make perfect egg bites or poached eggs, simply pour water into the base up to the fill line and fill the egg cups with your customized egg mixture or fresh eggs. In under 10 minutes, you'll have a protein-packed, keto-friendly breakfast to enjoy at home or on-the-go. After cooking, the nonstick egg cup tray removes for easy cleanup in the dishwasher.

* Starbucks is a registered trademark of Starbucks Corporation. Use of the Starbucks trademark does not imply any affiliation with or endorsement by Starbucks Corporation.

Модель 25504. Яйцеварка 3-в-1 вместимостью 7 яиц (бирюзовая).

FEATURES



- Cook eggs 3 different ways
- Enjoy perfect eggs every time
- One-touch cooking
- Omelet bowl also steams vegetables
- Faster than a stovetop
- Water measuring cup

Dimensions (inches): 6.25 H x 7.37 W x 6.37 D

DETAILS

If you think that a protein-packed breakfast is the perfect way to start your day, you need the Hamilton Beach® 3-in-1 Egg Cooker. With this versatile egg cooker in your kitchen, you can easily make a wide assortment of delicious, satisfying breakfasts to enjoy all week long. For soft, medium, or hard-boiled eggs and all the delicious recipes that call for them, the Hamilton Beach® 3-in-1 Egg Cooker is the way to go, since it cooks eggs consistently every time. If poached eggs are your thing, forget the trouble of cooking them on the stovetop and let the Hamilton Beach® 3-in-1 Egg Cooker do the work for you. If it's a homemade omelet that you crave, whip eggs and add in your favorite cheese, meat, vegetables and seasonings to create a unique flavor combination. Includes trays for cooking hard-boiled and poached eggs, an omelet/steaming bowl and a water measuring cup with a piercing needle and cover.

Cook Eggs 3 Different Ways with This Electric Egg Cooker

Make up to 7 soft, medium, or hard-boiled eggs, 1- 2 poached eggs or a delicious omelet to enjoy at home or on-the-go. Perfect for hectic weekday mornings and for family brunch on the weekend.

Enjoy Perfect Eggs Every Time

You'll never have to eat over- or under-cooked eggs again. Just add the right amount of water and the hard boiled egg cooker and egg poacher knows how to cook your eggs for the perfect amount of time.

One-Touch Cooking

Simply press the power button to cook and it does the rest. Egg cooker will beep to alert you that eggs are ready and Indicator light will turn off.

Omelet Bowl Also Steams Vegetables

Make a delicious omelet for breakfast or steam 1 to 2 servings of fresh vegetables, including carrots, green beans, zucchini and more.

Faster Than a Stovetop

This rapid egg cooker saves you time every morning because it's faster and easier than boiling eggs on the stovetop.

Модель 25505. Омлетница вместимостью 2 яйца (желтая).



FEATURES

- Makes perfect egg bites - Compare to Starbucks®* Skip the expense of egg bites from the coffee shop or grocery store and make your own in the comfort of your home. Your family will love the taste and you can use your own fresh ingredients.
- Create endless flavor options and fresh, preservative-free ingredients You can make an unlimited variety of egg bites using your own fresh ingredients and imagination, or start with the included recipes.
- Enjoy consistent results every time Don't bother with the oven or taking the time to sous vide — the Egg Bites Maker is the consistent, guess-free way to cook egg bites and poached eggs perfectly every time in under 10 minutes.

- Nonstick egg bite/poaching tray is dishwasher safe Eggs won't stick and after cooking, the nonstick tray and lid go on the top shelf of the dishwasher for easy cleanup.
- Power and cooking lights Indicate when power is on and eggs are ready. Includes water measuring cup Makes it easy to add the exact amount of water every time.

Dimensions (inches): 4.6 H x 8.0 W x 5.69 D

DETAILS

If you rely on Starbucks®* to satisfy your hunger for egg bites, save money and skip the trip to the coffee shop on your morning commute by making them at home with the Hamilton Beach® Egg Bites Maker. It lets you quickly and easily make your own velvety egg bites with fresh, delicious ingredients. And with the Hamilton Beach Egg Bites Maker, your choices are not limited — you can create an endless variety of egg bite flavors and combinations using your own fresh, preservative-free ingredients. In addition to making 2 egg bites, the Hamilton Beach Egg Bites Maker also expertly poaches 2 eggs. To make perfect egg bites or poached eggs, simply pour water into the base up to the fill line and fill the egg cups with your customized egg mixture or fresh eggs. In under 10 minutes, you'll have a protein-packed, keto-friendly breakfast to enjoy at home or on-the-go. After cooking, the nonstick egg cup tray removes for easy cleanup in the dishwasher.

* Starbucks is a registered trademark of Starbucks Corporation. Use of the Starbucks trademark does not imply any affiliation with or endorsement by Starbucks Corporation.

Модель 25507. Яйцеварка 3-в-1 вместимостью 7 яиц (черная).

FEATURES



- Cook eggs 3 different ways
- Enjoy perfect eggs every time
- One-touch cooking
- Omelet bowl also steams vegetables
- Faster than a stovetop
- Water measuring cup

Dimensions (inches): 6.25 H x 7.37 W x 6.37 D

DETAILS

If you think that a protein-packed breakfast is the perfect way to start your day, you need the Hamilton Beach® 3-in-1 Egg Cooker. With this versatile egg cooker in your kitchen, you can easily make a wide assortment of delicious, satisfying breakfasts to enjoy all week long. For soft, medium, or hard-boiled eggs and all the delicious recipes that call for them, the Hamilton Beach® 3-in-1 Egg Cooker is the way to go, since it cooks eggs consistently every time. If poached eggs are your thing, forget the trouble of cooking them on the stovetop and let the Hamilton Beach® 3-in-1 Egg Cooker do the work for you. If it's a homemade omelet that you crave, whip eggs and add in your favorite cheese, meat, vegetables and seasonings to create a unique flavor combination. Includes trays for cooking hard-boiled and poached eggs, an omelet/steaming bowl and a water measuring cup with a piercing needle and cover.

Cook Eggs 3 Different Ways with This Electric Egg Cooker

Make up to 7 soft, medium, or hard-boiled eggs, 1- 2 poached eggs or a delicious omelet to

enjoy at home or on-the-go. Perfect for hectic weekday mornings and for family brunch on the weekend.

Enjoy Perfect Eggs Every Time

You'll never have to eat over- or under-cooked eggs again. Just add the right amount of water and the hard boiled egg cooker and egg poacher knows how to cook your eggs for the perfect amount of time.

One-Touch Cooking

Simply press the power button to cook and it does the rest. Egg cooker will beep to alert you that eggs are ready and Indicator light will turn off.

Omelet Bowl Also Steams Vegetables

Make a delicious omelet for breakfast or steam 1 to 2 servings of fresh vegetables, including carrots, green beans, zucchini and more.

Faster Than a Stovetop

This rapid egg cooker saves you time every morning because it's faster and easier than boiling eggs on the stovetop.

По вопросам продажи и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Казахстан (7273)495-231

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: hmh@nt-rt.ru || <https://hamiltonbeach.nt-rt.ru/>