

Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Казахстан (7273)495-231

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: hmh@nt-rt.ru || <https://hamiltonbeach.nt-rt.ru/>

Модель 33453R. Программируемая мультиварка емкостью 3.7 литра.



FEATURES

- Cooks while you are away
 - Mix and match any temperature with your choice of cooking times
 - No watching or stirring
 - Easy-clean touch pad
 - Perfect size for 5 lb. chicken or 3 lb. roast
 - Removable, dishwasher safe stoneware crock & lid
 - Wraparound element for even heating
 - Three temperature settings - high, low, or warm
- When cooking time is up, it automatically shifts to warm
 - Select 2, 4, 6, 8, or 10 hours of cooking time

Dimensions (inches): 9 H x 16 W x 10.7 D

DETAILS

With everyone so busy these days, a slow cooker is the answer to preparing a delicious homemade meal. The Hamilton Beach Five-Quart Programmable Slow Cooker is large enough to cook a 5 lb. chicken or 3 lb. roast. The oval shaped stoneware crock is versatile for an assortment of foods. Simply place the ingredients in the crock, set the desired cooking time and temperature, and go. No watching or stirring is required. When the cooking cycle is complete, the slow cooker automatically shifts to keep warm. The dishwasher safe ceramic crock and lid make cleanup a breeze.

Модель 33476. Программируемая мультиварка емкостью 6.7 литра марки Stay or Go.



FEATURES

- Clip-Tight Sealed Lid For Spill Resistance
- More Programming Options Than Crock-Pot® Smart-Pot® Slow Cooker*
- Flexible Programming Options: Mix & Match High, Low & Warm Heat Settings with 2, 4, 6, 8, or 10 Hours Cooking Time
- Removable, Dishwasher Safe Stoneware Vessel and Glass Lid
- Automatically Switches To Warm When Cooking Time Is Complete
- Easy-Clean Touch Pad

Dimensions (inches): 10.6 H x 17.6 W X 11.8 D

DETAILS

Programmable, portable meals.

With the Hamilton Beach® Programmable 7 Quart Slow Cooker, making a delicious, home-cooked meal is as easy as putting a few ingredients in the crock and turning it on. Its large capacity and oval shape make it ideal for cooking a whole chicken or roasting meat to perfection. And with more programming options than Crock-Pot® Smart-Pot®, this Hamilton Beach slow cooker gives you the ultimate selection of temperature and cooking time combinations.

It features low and high cook settings and a warm setting, ideal for buffets or when dinner ends up later than you planned. Plus you can take hot food on the road risk-free by locking your lid into place with a clip-tight seal. When you're done, both the lid and crock remove easily and can go into the dishwasher for cleanup.

Flexible Programming Options

Use the easy-clean touch pad to choose high or low temperature setting and five different cooking times ranging from 2-10 hours. Once your cooking time is up, the slow cooker automatically shifts to warm.

Large, 7 Quart Capacity

This slow cooker is sized just right for feeding a crowd, satisfying the appetite of a large family or batch cooking. The oval-shaped stoneware can fit a variety of foods, such as a 7lb. chicken or a 5 lb. roast.

DESIGNED FOR PORTABILITY

Easy Clips Secure Lid

Lock your lid into place in one snap with simple clips on both sides.

Spill Resistant Seal

Once clipped into place, the locked lid creates a seal that prevents spills and leaks.

Worry-Free Travel

Keep your food in the crock, and not on your car floor, with the innovative Stay or Go® lid lock.

Модель 33477. Программируемая мультиварка с уменьшенной кастрюлей емкостью 6.7 литра марки Stay or Go.

FEATURES



- More programming options than Crock-Pot® Smart-Pot®* slow cooker
- 7 quart capacity
- Clip-tight lid helps prevent messy spills
- Flexible programming options
- Mix & match high, low & warm heat settings with 2, 4, 6, 8, or 10 hours cooking time
- Removable, dishwasher safe stoneware vessel and glass lid
- Automatically switches to warm when cooking time is complete

- Easy-clean touch pad

**Party Dipper™ food warmer included *CROCK-POT® and SMART-POT® are registered trademarks of Sunbeam Products, Inc. Use of the CROCK-POT® or SMARTPOT® trademark does not imply any affiliation with or endorsement by Sunbeam Products, Inc.*

Dimensions (inches): 16.30 H x 16.38 W X 11.50 D

DETAILS

Programmable, portable meals.

With the Hamilton Beach® Programmable 7 Quart Slow Cooker, making a delicious, home-cooked meal is as easy as putting a few ingredients in the crock and turning it on. Its large capacity and oval shape make it ideal for cooking a whole chicken or roasting meat to perfection. And with more programming options than Crock-Pot® Smart-Pot®, this Hamilton Beach slow cooker gives you the ultimate selection of temperature and cooking time combinations.

It features low and high cook settings and a warm setting, ideal for buffets or when dinner ends up later than you planned. Plus you can take hot food on the road risk-free by locking your lid into place with a clip-tight seal. When you're done, both the lid and crock remove easily and can go into the dishwasher for cleanup.

Flexible Programming Options

Use the easy-clean touch pad to choose high or low temperature setting and five different cooking times ranging from 2-10 hours. Once your cooking time is up, the slow cooker automatically shifts to warm.

Large, 7 Quart Capacity

This slow cooker is sized just right for feeding a crowd, satisfying the appetite of a large family or batch cooking. The oval-shaped stoneware can fit a variety of foods, such as a 7lb. chicken or a 5 lb. roast.

DESIGNED FOR PORTABILITY

Easy Clips Secure Lid

Lock your lid into place in one snap with simple clips on both sides.

Spill Resistant Seal

Once clipped into place, the locked lid creates a seal that prevents spills and leaks.

Worry-Free Travel

Keep your food in the crock, and not on your car floor, with the innovative Stay or Go® lid lock.

Модель 33561. Программируемая мультиварка из нержавеющей стали емкостью 5.7 литра марки Stay or Go.

FEATURES



- Clip-tight sealed lid helps prevent messy spills
- 3 versatile modes
- Select high, low, or warm mode with pre-programmed cooking time
- Or choose your own cooking time from 30 minutes to 20 hours
- Countdown timer with automatic keep warm when time is up
- Perfect size for 6 lb. chicken or 4 lb. roast
- 3 versatile modes with your choice of temperatures and cooking times
- Removable, dishwasher safe stoneware & lid
- Stainless steel exterior
- 3 modes: choose high, low, or warm with pre-programmed cooking time or adjust your time from 30 minutes to 20 hours
- Countdown timer with automatic keep warm at end of cooking time

Dimensions (inches): 11 H x 18 W x 11.5 D

DETAILS

The Hamilton Beach® Stay or Go® Programmable 6 Quart Slow Cooker offers features that make traveling with your food a breeze, including a clip-locked lid and full-grip handles. Choose from three heat settings and pre-program a cook time between 30 minutes and 20 hours. Worry-Free Travel Keep your food in the crock, and not on your car floor, thanks to the locking lid. The full-grip handles make carrying the slow cooker to and from the car a simple, stress-free matter. Flexible Time and Temperature Settings Select whether to cook on Low or High, then choose a cooking time between 30 minutes and 20 hours. When your meal is done cooking, the slow cooker will automatically switch to Warm. Large Capacity The crock's 6 quart capacity is perfect for one-pot dishes, family meals or crowd-pleasing appetizers. Dishwasher Safe Crock and Lid Removable stoneware crock and glass lid go in the dishwasher for easy cleanup. Hamilton Beach® products are thoughtfully designed to make your life easier. We use consumer insights, in-depth research and rigorous testing to deliver the best solution to your everyday needs. Whether it's preparing delicious meals and beverages effortlessly, or making your clothes look their best, you can count on the brand that has spent over 100 years creating products with you in mind.

Clip-Tight Sealed Lid

Clips lock lid onto slow cooker to help prevent messy spills, perfect for traveling to potlucks, tailgates or other gatherings.

Full-Grip Handles

Makes carrying the slow cooker from kitchen to car easier.

Large Capacity

6 quart capacity is the perfect size for 6 lb. chicken or 4 lb. roast.

High, Low And Warm Heat Settings

Cook on Low or High, and the slow cooker will switch to Warm automatically when your food is done.

Pre-Program A Cook Time

Set a custom cook time between 30 minutes and 20 hours.

Модель 33766. Программируемая мультиварка с уменьшенной кастрюлей емкостью 5.7 литра марки Stay or Go.

FEATURES



- Easy-clean touch pad
- More programming options than Crock-Pot® Smart-Pot®* slow cooker
- 7 quart capacity
- Clip-tight lid helps prevent messy spills
- Flexible programming options
- Mix & match high, low & warm heat settings with 2, 4, 6, 8, or 10 hours cooking time
- Removable, dishwasher safe stoneware vessel and glass lid
- Automatically switches to warm when cooking time is complete

**Party Dipper™ food warmer included *CROCK-POT® and SMART-POT® are registered trademarks of Sunbeam Products, Inc. Use of the CROCK-POT® or SMARTPOT® trademark does not imply any affiliation with or endorsement by Sunbeam Products, Inc.*

Dimensions (inches): 16.30 H x 16.38 W X 11.50 D

DETAILS

Programmable, portable meals.

With the Hamilton Beach® Programmable 7 Quart Slow Cooker, making a delicious, home-cooked meal is as easy as putting a few ingredients in the crock and turning it on. Its large capacity and oval shape make it ideal for cooking a whole chicken or roasting meat to perfection. And with more programming options than Crock-Pot® Smart-Pot®, this Hamilton Beach slow cooker gives you the ultimate selection of temperature and cooking time combinations.

It features low and high cook settings and a warm setting, ideal for buffets or when dinner ends up later than you planned. Plus you can take hot food on the road risk-free by locking your lid into place with a clip-tight seal. When you're done, both the lid and crock remove easily and can go into the dishwasher for cleanup.

Flexible Programming Options

Use the easy-clean touch pad to choose high or low temperature setting and five different cooking times ranging from 2-10 hours. Once your cooking time is up, the slow cooker automatically shifts to warm.

Large, 7 Quart Capacity

This slow cooker is sized just right for feeding a crowd, satisfying the appetite of a large family or batch cooking. The oval-shaped stoneware can fit a variety of foods, such as a 7lb. chicken or a 5 lb. roast.

DESIGNED FOR PORTABILITY

Easy Clips Secure Lid

Lock your lid into place in one snap with simple clips on both sides.

Spill Resistant Seal

Once clipped into place, the locked lid creates a seal that prevents spills and leaks.

Worry-Free Travel

Keep your food in the crock, and not on your car floor, with the innovative Stay or Go® lid lock.

Модель 33961. Программируемая мультиварка емкостью 5.7 литра марки Set & Forget.

FEATURES



- 6 quart capacity
 - Premium die-cast cookware for stovetop searing and oven-safe broiling
 - Flavorful results - stovetop searing and browning improve the taste and appearance of the finished meal
- 3 choices for easy, automatic cooking
 1. Probe:
 - Set to the desired meat temperature
 - Automatically shifts to keep

warm when temperature is reached

2. Program:
 - Set the cooking time
 - Automatically shifts to keep warm when time is up
3. Manual:
 - Works like a traditional slow cooker

Dimensions (inches): 11.4 H x 17.1 W X 11.8 D

DETAILS

Eliminate weeknight stress with the Hamilton Beach Set & Forget Programmable Slow Cooker. With three choices for automatic cooking, having a family meal on a busy weeknight is easier than ever. What you make and how you prepare it are up to you. Three smart settings – probe, program and manual – allow you to cook foods to a specific temperature, for a set number of hours or on High, Low or Warm settings for up to 24 hrs. Advanced features like a temperature display and probe minimize the chances of overcooking your meal.

Smart Settings for the Busy Home Cook

Smart technology allows you to cook a wide range of recipes to either a specific temperature when using the Probe setting or to a desired cooking time when using the Program setting. When your food is done cooking on either of these settings, the slow cooker will automatically switch to Warm. Or, use the Manual setting to cook on traditional Low or High heat.

Stovetop Searing

Searing meat before slow cooking will improve the taste and the appearance of your finished meal. Because the premium die-cast aluminum cookware insert can be used directly on your stovetop, it's a seamless transition from searing to slow cooking.

Oven-Safe Broiling

Normally if you want to finish off your slow cooker recipe with a golden, crispy crust, you'd have to transfer the hot contents of the crock to a new dish and place it under the broiler. Because the die-cast aluminum cookware can go straight in the oven, broiling your meal once it's done is safe and simple.

Temperature Probe Cooks to a Precise Temperature

The Probe setting is great when cooking cuts of meat. What's even better? Seeing the meat's internal temperature displayed right on the screen. Set the slow cooker to the desired temperature, insert the probe into the meat and the slow cooker will automatically shift to Warm when the programmed temperature is reached.

Модель 33463. Программируемая мультиварка емкостью 5.7 литра.

FEATURES



- Cooks while you are away
 - Mix and match any temperature with your choice of cooking times
 - More programming options than Crock-Pot® Smart-Pot®*
 - Easy programmable meals—no watching or stirring
 - Easy-clean touch pad
 - Perfect size for 6 lb. chicken or 4 lb. roast
 - Removable, dishwasher safe stoneware & lid
 - Wraparound element for even heating
- Temperature setting—choose high, low, or warm
 - No watching needed—when cooking time is up, it automatically shifts to warm
 - Time setting: select 2, 4, 6, 8, or 10 hours of cooking time

**CROCK-POT and SMART-POT are registered trademarks of Sunbeam Products, Inc. Use of the CROCK-POT or SMART-POT trademark does not imply any affiliation with or endorsement by Sunbeam Products, Inc.*

Dimensions (inches): 9.4 H x 16.9 W x 11 D

Модель 33660. Программируемая мультиварка емкостью 5.7 литра.

FEATURES



- 6 quart capacity
- Mix and match any temperature with your choice of cooking times
- Countdown timer shows you how much cooking time remains
- Cook from 30 minutes to 18 hours
- Heat setting - choose high, low, or warm
- Automatically switches to warm when cooking time is up
- Easy-clean touch pad

- Wraparound element for even heating
- Perfect size for 6 lb. chicken or 4 lb. roast
- Removable, dishwasher safe stoneware & lid

Dimensions (inches): 9.45 H x 16.93 W x 11.42 D

DETAILS

Know when dinner will be ready with flexible programming options.

Cook any slow cooker recipe effortlessly, and in the time you need it, with the Hamilton Beach® Programmable Slow Cooker. Easily schedule your meal to be ready when you want it with programmable times ranging from 30 minutes to 18 hours and low or high heat settings.

There's no need to monitor the cooking process – the wraparound element provides even heating that doesn't even require stirring. And a countdown timer lets you keep track of when dinner will be ready. Once cooking time is up, the slow cooker automatically switches to warm. When you're done, both the lid and crock remove easily and can go into the dishwasher for cleanup.

Easy, Flexible Programming Options

Use the easy-clean touch pad to choose high or low temperature setting and cooking times ranging from 30 minutes to 18 hours. A countdown timer displays remaining cooking time.

Automatically Switches to Warm

Once your cooking time is up, the slow cooker automatically shifts to warm. The warm setting is ideal for buffets or when dinner ends up later than you planned.

Dishwasher Safe For Quick and Easy Cleanup

The removable stoneware and glass lid are both dishwasher safe, making cleanup a breeze.

Create effortlessly delicious dinners.

Cook home-made meals for your family without having to spend the whole day in the kitchen ...now that's Good Thinking.

Модель 33473. Программируемая мультиварка емкостью 6.7 литра.

FEATURES



- Cooks while you are away
- Mix and match any temperature with your choice of cooking times
- More programming options than Crock-Pot® Smart-Pot®*
- Easy programmable meals - no watching or stirring
- Easy-clean touch pad
- Perfect size for 7 lb. chicken or 5 lb. roast
- Removable, dishwasher safe stoneware & lid
- Wraparound element for even heating
- Temperature setting - choose high, low, or warm
- No watching needed - when cooking time is up, it automatically shifts to warm
- Time setting - select 2, 4, 6, 8, or 10 hours of cooking time

*CROCK-POT and SMART-POT are registered trademarks of Sunbeam Products, Inc. Use of the CROCK-POT or SMART-POT trademark does not imply any affiliation with or endorsement by Sunbeam Products, Inc.

Dimensions (inches): 9.9 H x 17.6 W x 11.7 D

Модель 33474. Программируемая мультиварка емкостью 6.7 литра.

FEATURES



- Mix and match temperature with your choice of cooking times
 - More programming options than Crock-Pot® Smart-Pot®* slow cooker
 - Choose high, low or warm temperature settings
 - Select 2, 4, 6, 8, or 10 hours of cooking time
 - Gasket lid helps prevent messy spills when used with Lid Latch™ strap
- Easy-clean touch pad
 - Perfect size for 7 lb. chicken or 5 lb. roast
 - Removable, dishwasher safe stoneware & lid
 - Automatically shifts to warm when cooking time is up

**CROCK-POT and SMART-POT are registered trademarks of Sunbeam Products, Inc. Use of the CROCK-POT or SMART-POT trademark does not imply any affiliation with or endorsement by Sunbeam Products, Inc.*

Dimensions (inches): 9.9 H x 17.6 W x 11.7 D

DETAILS

Programmable, portable meals.

With the Hamilton Beach® Programmable 7 Quart Slow Cooker, making a delicious, home-cooked meal is as easy as putting a few ingredients in the crock and turning it on. Its large capacity and oval shape make it ideal for cooking a whole chicken or roasting meat to perfection. And with more programming options than Crock-Pot® Smart-Pot®, this Hamilton Beach slow cooker gives you the ultimate selection of temperature and cooking time combinations.

It features low and high cook settings and a warm setting, ideal for buffets or when dinner ends up later than you planned. Plus you can take hot food on the road risk-free thanks to the gasket lid and Lid Latch™ strap, which prevent messy spills. When you're done, both the lid and crock remove easily and can go into the dishwasher for cleanup.

Flexible Programming Options

Use the easy-clean touch pad to choose high or low temperature setting and five different cooking times ranging from 2-10 hours. Once your cooking time is up, the slow cooker automatically shifts to Warm.

Mess-Free Travel with Lid Latch

Lid Latch™ helps secure the lid while moving, transporting, or storing the slow cooker. It's

simple to use. Simply stretch the latch from underneath one handle to the other or cross at the middle for extra security.

Large, 7 Quart Capacity

This slow cooker is sized just right for feeding a crowd, satisfying the appetite of a large family or batch cooking. The oval-shaped stoneware can fit a variety of foods, such as a 7lb. chicken or a 5 lb. roast.

Модель 33969. Программируемая мультиварка емкостью 5.7 литра марки Set & Forget.



FEATURES

- Thermometer probe for precise results
 - Set it and forget it® with cooking modes featuring automatic keep warm
 - 3 program choices for easy, automatic cooking: Probe, Program and Manual
 - Spill-resistant travel— the lid quickly seals in place with the clip-tight gasket lid
 - Full-grip handles make carrying heavy meals easier
- 6 quart oval crock is the perfect size for a 6 lb. chicken or 4 lb. roast
 - Wraparound, even heat cooks food evenly and consistently
 - Removable, dishwasher safe oval stoneware crock & lid
 - Power interrupt protection - keeps slow cooker on during a brief power outage
 - Backed with a one-year warranty

Dimensions (inches): 11.14 H x 17.1 W x 11.8 D

DETAILS

Eliminate weeknight stress with the Hamilton Beach Set & Forget Programmable Slow Cooker. With three choices for automatic cooking, having a family meal on a busy weeknight is easier than ever. What you make and how you prepare it are up to you. Three smart settings – probe, program and manual – allow you to cook foods to a specific temperature, for a set number of hours or on High, Low or Warm settings for up to 24 hrs. Advanced features like a temperature display and probe minimize the chances of overcooking your food.

Smart Technology

Our smart technology allows you to cook a wide range of recipes to either a specific temperature when using the probe or to a desired cooking time. When your food is done cooking on either of these settings, the slow cooker will automatically switch to warm.

Three Automatic Cooking Choices

1. Cook to a Precise Temperature with Your Probe

The PROBE setting is great when cooking cuts of meat. What is even better? Seeing the food temperature inside the slow cooker displayed right on the screen. Set the slow cooker to the desired temperature, insert the probe into the meat and the slow cooker will automatically shift to warm when the desired temperature is reached.

- Insert probe and set the desired meat temperature
- Actual temperature of meat is displayed as it cooks
- Automatically shifts to keep warm when the temperature is reached

2. Cook to a Specific Time in Program Mode:

When your pot roast recipe will be done in 6 hours, but you won't be home for 8

hours or more, use the PROGRAM function. Select the heat setting and cooking time. The slow cooker will automatically switch to warm when the cooking time is up, so your meal will be hot and ready to serve when you arrive home. It's that easy.

- Set the exact cooking time needed
- Automatically shifts to keep warm when the time is up

3. **Do It Yourself in Manual Mode:**

The MANUAL setting allows you to slow cook on High, Low or Warm heat settings, just like a traditional slow cooker you may have grown up with.

- Set traditional high, low or keep warm without setting a time

Clip-Tight Gasket Lid Resists Spills

When you need to take your home-cooked meal on the road, the slow cooker's clip-locked, secure lid has a tight seal to help ensure that your shirt and your car arrive without a messy spill.

Power Interrupt Protection

The Set & Forget Programmable Slow Cooker is equipped with power interrupt protection. So during a momentary power interruption of 5 seconds or less, the slow cooker will remember the programmed heat and time settings and continue cooking.

Perfect Size for Family Dinner

The 6 quart oval crock is the perfect size for a 6 lb. chicken or 4 lb. roast and so much more. It's the perfect size for a home-cooked family meal.

Модель 33967. Программируемая мультиварка емкостью 5.7 литра с ложкой и крышкой марки Set & Forget.



FEATURES

- 3 choices for easy, automatic cooking: probe, program and manual
- Thermometer probe for meat
- Clip-on spoon and clip-tight gasket lid
- Full-grip handles
- Power interrupt protection

DETAILS

Eliminate weeknight stress with the optimum flexibility of the Hamilton Beach® Programmable Set & Forget® 6 Quart Slow Cooker. With three choices for easy, automatic cooking, having a family meal on a busy week night is possible.

Sit down to juicy pot roast, savory roasted chicken, or pulled pork barbeque. What you make and how you cook it are up to you. Choose PROBE when cooking meats. Set the slow cooker to the desired meat temperature and it will automatically shift to warm when the temperature is reached. For soups or chili, choose PROGRAM and set the cooking time. It will switch to warm when the set time is complete. When you're at home or able to monitor, MANUAL can be used. This setting allows you to choose high, low, or keep warm and the cooker will stay at that temperature. You can also insert the thermometer probe and the internal temperature of your meat will appear on the display as it cooks.

Created to fit your lifestyle, this slow cooker is easy to use and a snap to clean.

Know the Temperature

When making pot roast or turkey breast, wouldn't it be nice to know when your meats are

fully cooked? We thought so too, so the Hamilton Beach® Programmable Set & Forget® 6 Quart Slow Cooker is designed with a probe that displays the temperature as it's cooking. It's perfect for knowing when meat is cooked or for deciding when to start side dishes.

Automatic Cooking Choices

- **Probe**
Set to the desired meat temperature. Automatically shifts to keep warm when temperature is reached.
- **Program**
Set the cooking time. Automatically shifts to keep warm when time is up.
- **Manual**
Select high, low, or keep warm without setting a time.

Power interrupt protection

The Hamilton Beach® Programmable Set & Forget® 6 Quart Slow Cooker comes with an abundance of features. In addition to the three cooking choices and the temperature probe, it also is equipped with protection during a brief power outage. This feature keeps it on during those unexpected, brief outages, so when you come home your clocks might be blinking but your meal is hot and ready to serve.

Cooking side dishes or dessert

Main courses, soups, and one-pot meals are not the only things slow cookers are great for preparing. They are also perfect for making side dishes and desserts, especially when your main oven is full. Make everything from bread pudding to caramel apples in this versatile appliance.

USING SLOW COOKER MODES

- **Using the Program Mode**
If you'll be busy or away when your food is finished cooking, use the PROGRAM mode. It's easy. Simply input the amount of time your food needs to cook and select the HIGH or LOW heat setting. As food cooks, the illuminated display on the control panel will alternate between the heat setting and the remaining time. When the cooking cycle is complete, the Set & Forget® Programmable Slow Cooker will automatically shift to WARM setting.
- **Using the Probe Mode**
For many foods, especially large cuts of meat, the internal temperature is the best test for doneness. The temperature probe takes the guesswork out of slow cooking. Select the desired internal food temperature and the slow cooker will automatically shift to WARM once the temperature is reached. By using the cooking guide for the PROBE mode you can estimate the amount of time the food will need to cook.
- **Using the Manual Mode**
On days when you want to keep things simple, you can simply select between the HIGH and LOW heat setting to cook your food. When your food is ready, turn the unit OFF or select the WARM setting until you're ready to serve your food.

TIPS FROM OUR TEST KITCHEN

- To prevent overcooking, the crock should be filled half-full to no more than one inch from the rim. However, this does not mean to fill the crock with liquid. If cooking soups or stews, leave a 2-inch (5 cm) space between the top of the crock and the food so the recipe can come to a simmer.
- If you lift the lid during cooking, your cooking time will increase due to heat loss. Unless your recipe specifically calls for stirring, resist lifting the lid.
- If you want to store leftovers after cooking, do NOT place the entire crock in the refrigerator since contents will take too long to cool. Instead, divide leftovers into smaller containers and place in the refrigerator.

- **Cooking Meat**

A slow cooker is great for foods that are not naturally tender, such as meat with a lot of connective tissue. These are the least-expensive cuts but also the most flavorful. Like braising, slow cookers tenderize meat slowly as it cooks. If you choose cuts such as chuck roast, pork butt, short ribs or chicken thighs, you won't be disappointed with the results. If fat is an issue, refrigerate the contents after cooking and skim off the extra fat before serving. Note: you must thaw frozen meat and poultry before adding it to the slow cooker. Get inspired by the slow cooker recipes created by our Test Kitchen!

- **Cooking Side Dishes or Dessert**

Main courses, soups and "one-pot" meals are not the only things that slow cookers are great for preparing. They are also perfect for making side dishes and dessert, especially when your main oven is full.

Модель 33957. Программируемая мультиварка емкостью 3.7 литра марки Stay or Go.

FEATURES



- Clip-tight sealed lid for spill resistance
- 2 choices for easy, automatic cooking:
 - Program - set the cooking time & automatically shifts to keep warm when time is up
 - Manual - works like a traditional slow cooker
- Clip-on spoon rests on dish for serving and on lid for travel

- Dishwasher safe stoneware & lid
- Full-grip folding handles for easy carrying

DETAILS

Have the best of both worlds with the Hamilton Beach® Stay or Go® 5 Qt. Programmable Slow Cooker. With a 5 quart capacity and two choices for automatic cooking, dinner just got easier.

Roasts, stews, soups and one pot meals can be prepared how you see fit thanks to the Program or Manual options. If you choose Program, simply set the cooking time and the cooker will cook your food, then automatically turn to warm once the programmed time is complete. The Manual option works like a traditional slow cooker and allows you to cook on a high or low setting.

As part of our groundbreaking Stay or Go® line, the 5 Qt. Programmable Slow Cooker gives you the convenience of easy, no-watch cooking with the added benefit of worry-free travel. The lid clips tight for portability and hinges back for easy serving. It even comes with a clip-on spoon.

The crock's 5 quart capacity is perfect for one-pot dishes, roasts or party dips. When finished, both the lid and crock remove easily for cleanup. Both are dishwasher safe.

A Fan Favorite. From football games to family meals, everyone is a fan of the Hamilton Beach® Stay or Go® 5 Qt. Programmable Slow Cooker. It is ideal for simple, worry-free dishes. When you cook a meal slowly, flavors meld into a delicious and satisfying meal. In fact, the meals are so good, they may even bring you comfort if your team loses the big game.

Single Clip Lid Like other Stay or Go® slow cookers, the 5 Qt. Programmable Slow Cooker features a locking lid for easy, mess-free travel.

Clip on Spoon No more worrying about where your serving spoon is. Our clip-on spoon rests on the dish for serving and clips onto the lid for traveling.

Full Grip Handles Slow cookers are heavy, especially when they are full of your signature dish. Our full grip handles are sturdy and allow for easy carrying. They also fold down for easy storage.

Digital Display The Hamilton Beach® Stay or Go® 5 Qt. Programmable Slow Cooker has an easy to read display and simple-touch buttons. When using the programmable function the display will go between the heat setting and remaining cook time. If using the manual setting the display will go between COOK and the heat setting.

The no spill, traveling slow cooker. Your slow cooker is just as likely to be needed away from home as it is at home. That's why Stay or Go® Slow Cookers feature secure, clip-tight lids for spill-resistant travel. Even better, the full-grip handles make carrying them to and from the car a simple, stress-free matter.

Stay or Go® Slow Cookers offer you all the advantages of easy, no-watch cooking with the added benefit of worry-free travel. They're equipped to protect food en route to parties and potlucks anytime you want. Once you're back at home, the stoneware insert removes for easy cleanup in the dishwasher.

Модель 33443. Программируемая мультиварка емкостью 3.7 литра.

FEATURES



- Flexible programming options
- 4 quart capacity
- Mix and match temperature with your choice of cooking times
- More programming options than Crock-Pot® Smart-Pot®* slow cooker
- Easy programmable meals — no watching or stirring
- Easy-clean touch pad
- Perfect size for 4 lb. chicken or 2 lb. roast
- Removable, dishwasher safe stoneware & lid
- Wraparound element for even heating
- Temperature setting - choose high, low, or warm
- No watching needed - when cooking time is up, it automatically shifts to warm
- Time setting - select 2, 4, 6, 8, or 10 hours of cooking time

*CROCK-POT® and SMART-POT® are registered trademarks of Sunbeam Products, Inc. Use of the CROCK-POT® or SMART-POT® trademark does not imply any affiliation with or endorsement by Sunbeam Products, Inc.

DETAILS

With the Hamilton Beach® Programmable Slow Cooker, making a delicious, home-cooked meal is as easy as putting a few ingredients in the crock and turning it on. Its 4 quart capacity and oval shape make it ideal for cooking a 4 lb. chicken or roasting meat to perfection. And with more programming options than Crock-Pot® Smart-Pot®, this Hamilton Beach® slow cooker gives you the ultimate selection of temperature and cooking time combinations.

There's no need to monitor the cooking process – the wraparound element provides even heating that doesn't require stirring. Once cooking time is up, the slow cooker automatically switches to warm. When you're done, both the lid and crock remove easily and can go into the dishwasher for cleanup.

Модель 33970. Мультиварка Hamilton Beach Professional емкостью 5.7 литра.



FEATURES

- 5 year limited warranty
- Sous vide and slow cooking in one appliance
- 6 quart capacity
- Programmable for up to 72 hours of sous vide cooking
- Slow cook up to 8 hours on HI or 16 hours on LO
- Nonstick insert for easy cleanup
- Recipe book included

DETAILS

Precisely cooked food made easy

Bring the no-fail cooking method professional chefs rely on to your kitchen with the Hamilton Beach Professional Sous Vide and 6 Quart Slow Cooker. This sous vide water oven also doubles as a slow cooker, giving you two of the most convenient cooking methods in one countertop appliance.

Whether you're a grilling enthusiast seeking that perfectly pink center, or a frequent entertainer who wants to wow guests with a tender roast, or a family that just wants easy and flexible cooking, the sous vide method is for you. How does it work? It's a simple process of cooking vacuum or bag-sealed food in a precise temperature-controlled water bath. The result is evenly cooked food. Your food won't run the risk of being over or undercooked because sous vide only cooks to the precise temperature of the water bath. Exceptional for cooking meats and fish, the sous vide is also great for eggs, fruits, vegetables and even desserts.

Switch over to slow cooker mode to cook an entire meal without any monitoring. You can program your cooking time and temperature, and once that's ended, the slow cooker will automatically switch to warm. Both modes offer the ease of walk-away cooking. The 6 quart nonstick vessel removes for easy water fill up and clean up.

No-Fail Cooking

No more predicting heat settings to get the best internal temperature – the sous vide method cooks food at the desired internal temperature. And because the temperature is precisely

controlled throughout the cooking process, it reduces the chance of over- or undercooking and food is evenly cooked throughout.

Dual Functionality, Twice the Versatility

Switch from sous vide to slow cooker in just a press of a button. Both options let you program time and temperature for hands-off cooking.

Flexible to Fit Your Schedule

Because the water bath's temperature is low and controlled, you won't run the risk of overcooking if time gets away from you. The slow cooker mode can be programmed in advance and automatically switches to warm, so dinner's ready whenever you are.

5 Year Limited Warranty

Hamilton Beach Professional Sous Vide and Slow Cooker's exceptional performance and superior durability is backed by a 5 year limited warranty.

For Sous Vide Cooking:

Set Up

Season food and place in a vacuum-sealed or re-sealable, heat-safe bag, that's BPA-free, PVC-free and labeled suitable for sous vide. Fill your sous vide with warm water, select temperature and time, then press start.

Submerge

Once water has reached the desired temperature, place the ingredients into the sous vide water bath, cover with a lid and enjoy the walk-away convenience.

Enjoy

Remove food from bags and enjoy delicious, tender food that's cooked to the precise temperature you selected. Searing off meat is optional but adds a nice finish to your meal.

По вопросам продажи и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Казахстан (7273)495-231

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Таджикистан (992)427-82-92-69

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: hmh@nt-rt.ru || <https://hamiltonbeach.nt-rt.ru/>